


USE AND CARE GUIDE

PENDANT FIXTURE

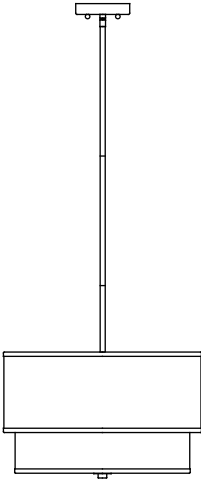

THANK YOU

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this pendant fixture. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!

Warranty

5-YEAR LIMITED WARRANTY

The manufacturer warrants this lighting fixture against defects in materials and workmanship for a period of five year(s) from the date of purchase. If within this period the product is found to be defective in material or workmanship, the product must be returned, with a copy of the bill of sale as proof of purchase, to the original place of purchase. The manufacturer will, at its option, repair, replace, or refund the purchase price to the original purchaser or consumer. This warranty does not cover light bulbs or the fixture becoming damaged due to misuse, accidental damage, improper handling and/or installation, and specifically excludes liability for direct, incidental, or consequential damages. Some states do not allow exclusions or limitations on an implied warranty, so the above exclusions and limitations may not apply. This warranty gives you specific rights and you may also have other rights that vary from state to state.

Contact the Customer Service Team at 1-877-527-0313 or visit www.homedepot.com.



Questions, problems, missing parts? Before returning to store, call Commerial Electric Customer Service
8 a.m. - 6 p.m., EST, Monday - Friday

1-877-527-0313

HOMEDEPOT.COM

Retain this manual for future use.

Safety Information

IMPORTANT SAFETY INSTRUCTIONS

(Save These Instructions)

- Read all instructions prior to beginning the installation process.
- Make sure the power is turned off at the electrical panel box before beginning your installation. Turning the power off at the wall switch is not sufficient to prevent electrical shock.
- This fixture is intended to be mounted to a 4 in. square x 2-1/8 in. deep metal octagon outlet box. The box must be directly supported by the building structure.
- All electrical connections must be in accordance with local codes and the National Electrical Code. If you are unfamiliar with methods of installing electrical wiring, secure the services of a qualified licensed electrician.

WARNING: Do not install this lighting system in a wet location.

CAUTION: Turn off/unplug the light and allow it to cool before replacing the bulb.

CAUTION: Keep the lamp away from materials that may burn.


Care and Cleaning

CAUTION: Do not use chemical solvents or harsh abrasives to clean the fixture or components, as damage may occur.

- To clean the fixture, first disconnect the power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box.
- Use a dry or slightly dampened, clean cloth (use clean water, never use a solvent) to wipe the interior and exterior surfaces of the xture.
- Allow the fixture to dry completely before power is restored.


Pre-Installation

TOOLS REQUIRED

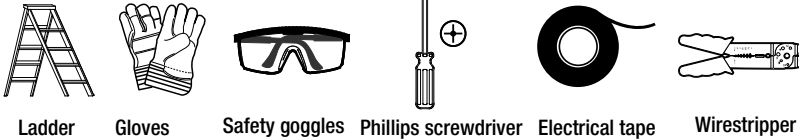

HARDWARE INCLUDED


NOTE: Hardware not shown to actual size.

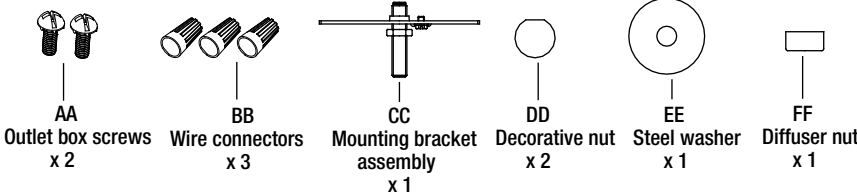

Installation

1 Assembling the rods


- Screw the rods (B,C) together to form one long rod.

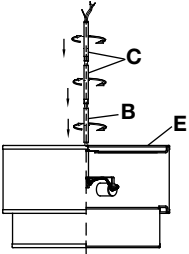

Installation


5 Installing the mounting bracket assembly

- Make sure the power is off.
- Pull the supply wires down out of the outlet box.
- Remove the pre-assembled decorative nuts (DD) from the mounting bracket assembly (CC).
- Attach the mounting bracket assembly (CC) to the existing outlet box with the outlet box screws (AA) provided.

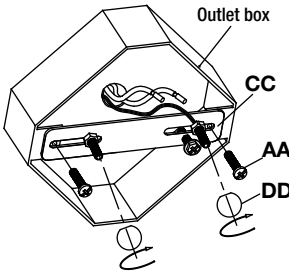

6 Making the electrical connections


- Attach the ground wire from the outlet box to the ground screw on the mounting bracket (CC), which is green and marked "GND".
- Connect the negative wires (raised ribs without writing) from the fixture to the negative wires from the supply circuit, the positive wires (smooth with writing) from the fixture to the positive wires from the supply circuit, and the ground wire (bare) from the fixture to the ground wire from the supply circuit using the wire connectors (BB).
- Wrap electrical tape (not included) around the wire connectors (BB), and ensure they are secure.
- Push all excess wire and wire connections back into the outlet box.

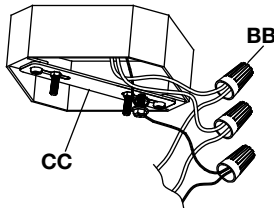

Installation

2 Attaching the canopy to the straight rod


- Thread the fixture wires up through the canopy (A).
- Screw the rod assembly into the canopy (A).

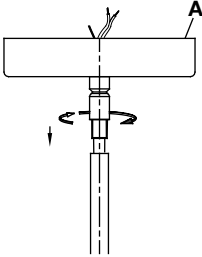

3 Installing the threaded rod assembly and bulb


- Secure the threaded rod assembly (D) to the fabric shade (E), and tighten it using the hex nut on the threaded rod assembly (D).
- Install the light bulbs (sold separately).

CAUTION: Refer to the re-lamping label located on the fixture. Do not exceed the recommended wattage.

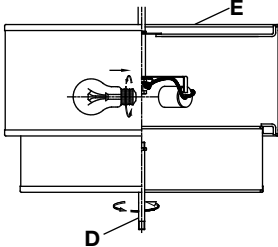

4 Installing the diffuser


- Place the diffuser (F) and the steel washer (EE) onto the threaded rod assembly (D), and secure them with the diffuser nut (FF).

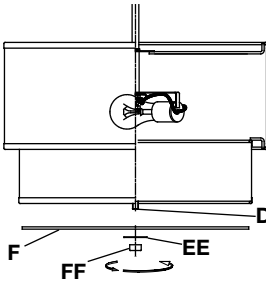

Installation

7 Attaching the canopy to the ceiling

- Raise the canopy (A) up to the outlet box.
- Secure the canopy (A) to the mounting bracket assembly (CC) using the decorative nuts (DD) provided.
- Adjust the length of the mounting bracket assembly (CC) studs and hex nuts if necessary.

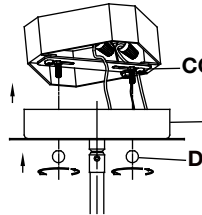

Troubleshooting

Problem	Possible Cause	Solution
The light bulb will not illuminate.	The light bulb is burned out.	Replace the light bulb.
	The power is off.	Make sure the power supply is on.
	There is a faulty wire connection.	Check the wiring. Contact a qualified and licensed electrician if you are not comfortable troubleshooting wiring problems.
	There is a faulty switch.	Test or replace the switch.
The fuse blows or the circuit breaker trips when the light bulb is illuminated.	There are crossed wires, or the power wire is not properly grounded.	Check the wire connections.